

OPERATING AND MAINTENANCE MANUAL

- PEDIATRIC & NEONATAL- Flowmeter



FM - SS(S) T U (-) VV (WW) - (X)

Flowrate

Inlet Connection

Color Code

Gas

*Basic matrix shown. Consult the Amvex Catalogue for full matrix or contact your Amvex representative.
The product package label contains your product identifier and description.*

CAUTION: Federal (USA & Canadian) law restricts this device to sale by or on the order of a licensed healthcare practitioner.

AMVEX

25B East Pearce St., Richmond Hill, ON L4B 2M9 Canada | Tel: **905.764.7736** | Fax: 905.7647-7743 | www.amvex.com

1111 Lakeside Drive, Gurnee, IL 60031-4099 | Tel: 1.800.448.0770 | Fax: 847.855.6300
www.ohiomedical.com

IMPORTANT: SAFETY INSTRUCTIONS

This manual provides you with important information about the Flowmeter and should be read carefully to ensure the safe and proper use of this product.

Read and understand all the safety and operating instructions contained in this booklet before using this product.

If you do not understand these instructions, or have any questions, contact your supervisor, dealer or the manufacturer before attempting to use the apparatus.

⚠ WARNING: Indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.

ATTENTION: Indicates a potentially hazardous situation, which if not avoided, could result in minor or moderate injury.

CAUTION: Indicates a potentially hazardous situation, which if not avoided could result in property damage.



Consult operating manual



Symbol indicates the device complies with the requirements of Directive 93/42/EEC concerning medical devices (on CE marked devices only)



Use no oil

Receiving Inspection

Remove product from package and inspect for damage. Verify that the model received is in working order. If product is damaged, or incorrect do not use. Contact your dealer, equipment provider or manufacturer.

CAUTION: The tube inside the FM-200 & FM-01 Flowmeters are made of glass and are fragile. Special care should be taken to avoid breaking.

ATTENTION: It is very important to allow product to remain in original packaging for 24 hours to acclimatize to room temperature before use.

ATTENTION : Store the product in a sealed package to avoid environmental damage. The operating and storage temperature for the Flowmeter should reflect typical environmental conditions of a medical facility environment.

User Responsibility

⚠ WARNING: Service of this device should only be performed by properly trained individuals.

This product performs as explained in this manual. This holds true as long as the assembly, use, repair and maintenance are properly followed according to our instructions. Periodic review of this device is recommended. If any damage or defects are present, the product should not be used. This includes parts that may have been altered, contaminated, worn or missing. If any of the above are noted, immediate repair / replacement is required. If this device is subject to improper maintenance, repair, use and / or abuse leading to malfunction of the device, replacement is the sole responsibility of the user.

⚠ WARNING: Operation of this device is not to be done if flammable anesthetics are present due to the possibility of explosion caused by static charge.

TO MINIMIZE THE RISK OF EXPLOSION OR FIRE:

- Never attempt to attach a Flowmeter directly to a cylinder.
- Never use grease, oil, organic lubricants or flammable materials on or near the Flowmeter.

- Never smoke in an area where oxygen is being used.
- Never use any type of flame or flammable or explosive material near the Flowmeter.
- Always follow CGA and ANSI standards for Flowmeters and Medical Gas Products (E-7) and Oxygen Handling (G-4).

ATTENTION: Keep the Flowmeter in a clean area when not being used.

ATTENTION: Ensure that all connections are tightened and free of leaks prior to use. Only use an oxygen-safe leak detector when testing for leaks.

Intended Use

The Amvex Flowmeter is used to dispense an adjustable flow of gas accurately under the direction of a health-care professional. The gas at which the Flowmeter is calibrated to depends on the model. Each Flowmeter is for use with only one type of gas. The Flowmeters are available with a number of gas specific adapters.

Specifications

Model	Scale	Increments	Accuracy	Max. Flood/Flush	Transport/Storage Requirements
FM-200	0-200 CCM	25 CCM (starts at 25 CCM)	+/- 20 CCM	500 CCM	-40°F to 140°F (-40°C to 60°C)
FM-01	0-1 LPM	0.1 LPM (starts at 0.1 LPM)	+/- 0.1 LPM	2.5 LPM	-40°F to 140°F (-40°C to 60°C)
FM-03	0-3.5 LPM	0.125 LPM from 0.125 to 1 LPM	+/- 0.125 LPM or +/- 10% of reading (whichever is greater)	45 LPM	-40°F to 140°F (-40°C to 60°C)
		0.25 LPM from 1 to 3.5 LPM			

Flowmeters are calibrated at the pressure indicated on the flow tube at 70° F (21 °C), standard atmospheric pressure. Specifications are subject to change without prior notice.

⚠ MRI WARNING: This product contains magnetic, ferrous material that may affect the result of an MRI. MR Conditional options may be available, contact your Amvex Representative at 1-866-462-6839 (905-764-7736)

Operating Instructions

1. Turn knob to the off position.
2. Inspect the Flowmeter for damage. If any is found, do not use the Flowmeter.

CAUTION: Over tightening the knob when turning the Flowmeter off will cause damage. The Flowmeter must be used with the Flow Tube in an upright position.

⚠ WARNING: The Flow Tube specifies the gas and pressure required. The accuracy will be affected if a different pressure, other than the one specified, is used.

3. Connect the Flowmeter to the supply pressure and gas specified on the Flow Tube

⚠ WARNING: The accuracy may be affected if the temperature of the gas is different than 70° F (21° C) and the supply pressure is different than that indicated on the Flow Tube.

NOTE: The accuracy of the flow will not be affected by the attachment of accessories, however, the indicated flow may change.

⚠ WARNING: Connection to the gas source must be done by using only the appropriately indexed fitting.

4. Ensure that the Float Ball is at the very bottom of the Flow Tube when turned off.

NOTE: If the Float Ball is not at the bottom of the Flow Tube, the Flowmeter is leaking. Please contact your dealer or Amvex Corporation.

5. Adjusting the Flow:

To Decrease Flow: Turn the knob clockwise

To Increase Flow: Turn the knob counter clockwise

6. To set the flow, align the center of the float ball to the indicator line on the Flow Tube.

!WARNING: To avoid injury ALWAYS confirm flow requirement for patient prior to dispensing. Check flow frequently while being administered to patient.

7. An undetermined flow will arise if flow is adjusted beyond the highest calibrated indicator.

8. Turn knob completely counterclockwise to achieve maximum flood/flush flow.

NOTE: Any flow beyond the highest calibrated line on the Flow Tube with unrestricted flow is Flood/Flush flow.

Cleaning Instructions

Use a clean damp cloth with a mild cleaning solution to wipe outside of product. DO NOT gas sterilize with ETO. DO NOT clean with pungent hydrocarbons.

CAUTION: DO NOT submerge product in any form of liquid. This will cause damage and void the warranty.

Troubleshooting

Contact your dealer or the technical support department at Amvex Corporation for assistance if the Flowmeter does not function properly.

Maintenance Prevention

Inspect the product before and after use for any damage and ease of operation.

!WARNING: When changing connectors on the Flowmeter for service or replacement, never re-attach connectors of a different gas. Doing so may result in patient injury or damage to the equipment.

CAUTION: Disconnect Flowmeter from gas supply before servicing.

WARRANTY

Amvex Corporation warrants its Medical Secondary Equipment to be free from defects in material and workmanship for a period of twelve (12) months from the date of shipment. Within the first twelve (12) months from date of shipment Amvex will repair or replace any part which is proven to be defective at Amvex's cost. This warranty is valid only when the product has been properly installed according to Amvex specifications, used in a normal manner and serviced according to factory recommendations. It does not cover failures due to damage occurring in shipments or failures resulting from accidents, misuse, abuse, neglect, mishandling, alteration, misapplication or damage that may be attributable to acts of God.

AMVEX CORPORATION DOES NOT HONOR VERBAL STATEMENTS CONCERNING THE WARRANTY.

The distributor and/or dealer is not sanctioned to create verbal warranties about the product described in this agreement. Any statements will not be honored or be made part of the agreement of sale. (This document is the final, complete and the exclusive terms of agreement.)

THIS WARRANTY IS EXCLUSIVE AND REPLACES ALL OTHER WARRANTIES.

Amvex Corporation shall not, under any circumstances, be liable for incidental or consequential damages including, but not limited to, profit loss, loss of sales or injuries to person(s) or property. Correction of non-compliances as noted above will result in completion of all liabilities of Amvex Corporation whether based on agreement, neglect or otherwise. Amvex Corporation reserves the right to stop manufacturing any product or change materials, designs or specifications without notice. All claims for warranty must be approved by Amvex's Repair Department: (support@amvex.com or 905-764-7736). A valid Return Goods Authorization (RGA) number must be obtained from Amvex prior to commencement of any warranty claim.

Authorized Representative in the European Union:	Oxygen Care Ltd. 2 Holfeld Business Park Kilmacanogue Co Wicklow Ireland
EC REP	

FM-PED-MANUAL 04/11